

ATD SERIES

AIR TOOL DRYER

REPLACEMENT KIT FOR ATD-1/2 - CL





Risk of injury. Release all air pressure from system before servicing.

>> INSTALLATION

>> HOW TO INSTALL A NEW REPLACEMENT KIT



- 👺 Open the camlock caps.
- Remove everything from the dryer but keep the grids. Leave the gaskets in the caps.
- Insert parts in the order shown on the other page.
- Open air supply SLOWLY. Check caps for air leakage. If leakage occurs, shut off air supply, relieve pressure from unit by manually activating the drain cock on the ATD. Make sure that the gaskets and covers are installed properly

EATD-CL (P/N: 290-122) REPLACEMENT KIT INCLUDES:

Desiccant Bag x 1 Felt Pad x 2 Paper Filter x 2

Stainless steel grid Paper filter Felt Stainless steel grid Desiccant Bag Stainless steel grid Felt Paper filter Stainless steel grid Felt Stainless steel grid Felt Paper filter Stainless steel grid

USA / Canada : 1 877-797-2777 International : 1 416- 410-1313
Email: sales@nexflow.com Website: www.nexflow.com